

Instructions

# GREASE JOCKEY

8 Point Fifth Wheel Manifold Kit #258248



**Important Safety Instructions**


Read all warnings and instructions in this manual. Save these instructions.

313020A

---

# Typical Layout

Point No.	Description	Meter Size	Tube Color	Bundle & marking	Recommended Fitting P/N
1	Boom Pivot Right Hand	4	Orange	1-tube	556644 Connector 15K783 Elbow
2	5th Wheel Pivot	4	Orange	2-tube unmarked	556638 Elbow
5	5th Wheel Top Plate Right Hand Rear	8	Black		556644 Connector 557395 Elbow
3	Plug				
4	5th Wheel Top Plate Right Hand Front	8	Black	1 tube	556638 Elbow
6	Plug				
7	Plug				
8	5th Wheel Top Plate Left Hand Rear	8	Black	2-tube unmarked	556644 Connector 557395 Elbow
11	5th Wheel Pivot Left Hand	4	Orange		556638 Elbow
9	5th Wheel Top Plate Left Hand Front	8	Black	1-tube	556638 Elbow
10	Plug				
12	Boom Pivot Left Hand	4	Orange	1-tube	556644 Connector 15K783 Elbow

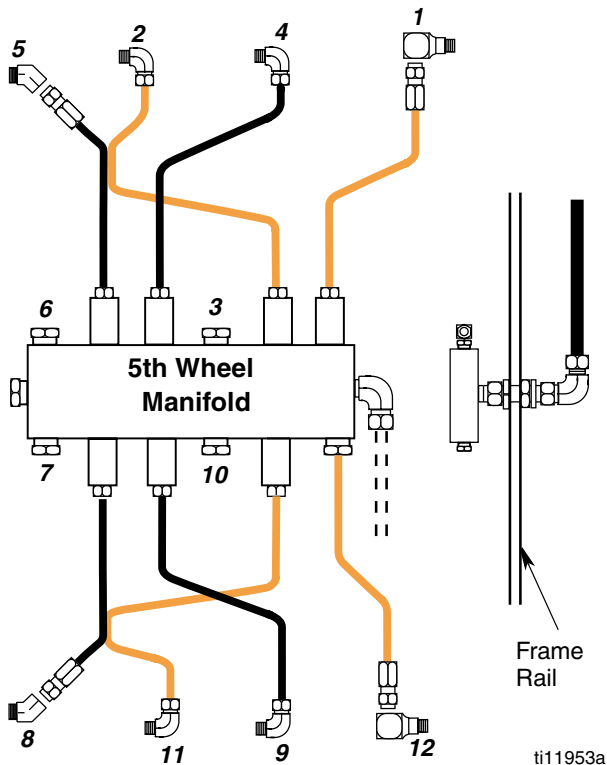

## Installation Instructions

1. Locate hole or drill and ream a 5/8" hole in frame rail.
2. Mount module through hole in frame with lock washer against hex on stud. **Do not overtighten.**
3. Run orange lines to the plate pivot points and black lines to the tapped holes in plate.
4. Make sure lines do not rub on 5th wheel or its mounting components; the tubing can be pinched or wear through.
5. The main line connection is through an elbow, 556640, at one end. There may be a plug in the other end, another elbow or a straight fitting to allow grease to the next module.

## Other Modular Kits Available from Lubriquip

<b>Pump Kits</b>	<b>Part No.</b>	<b>Description</b>
Air Pump - Flexible Reservoir	563847	10 lb grease capacity
Air Pump - Rigid Plastic Reservoir	563854	6 lb grease capacity
Electric Pump - Flexible Reservoir	563871	10 lb grease capacity
Electric Pump - Rigid Plastic Reservoir	563872	6 lb grease capacity
<b>Front Left Kits</b>		
No Springs	563706	7 points
Springs	563644	10 points
<b>Front Right Kits</b>		
Auto Transmission - No Springs	563380	5 points
Auto Transmission - Springs	563858	8 points
Manual Transmission - No Springs	563859	7 points
Manual Transmission - Springs	563645	10 points
<b>Rear Axle Kits</b>		
Single Axle	563647	4 points
Tandem Axle	563646	8 points
<b>Fifth Wheel Kit</b>	563648	6 points
<b>Add-on Meter Kits</b>		
Rear Spring Kit	563861	2 points
Steering Assist	563862	2 points
Hood Pin Kit	563879	4 points
<b>Optional Add-On Kits</b>		
Dump Body	563857	6 points
<b>Pusher or Drop Axle Kits</b>		
Non-steerable	563856	6 points
Steerable	564194	10 points

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

*This manual contains English. MM 313020*

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441**

Copyright 2007, Graco Inc. is registered to I.S. EN ISO 9001

[www.graco.com](http://www.graco.com)

4/2008