

Parker EZ Series Pneumatic Lockout

The EZ series meets all the same standards as the LV series with the added feature of a soft start when opened. There are still 2 detented positions for the handle (push close, pull to open), but when pulled open, an adjustable needle valve controls the rate of pressure build-up. This can protect equipment during start up after maintenance

Features


- Easily identified blue dot on label
- “EZ” soft starting
- Ideal for most applications

Specifications

- Operating temperature: 40°F to 175°F
- Media: Filtered compressed air (5 micron)
- Inlet pressure: 30 to 150 psi



| Port In / Out | Port Exh | Part Number* | scfm In / Out | scfm Exh | A (in) | B (in) | C (in) | Wt (lb) |
|---------------|----------|--------------|---------------|----------|--------|--------|--------|---------|
| 3/8 | 3/4 | EZ03NB6 | 136.4 | 181 | 6.4 | 8.8 | 2.0 | 2.1 |
| 1/2 | 3/4 | EZ04NB6 | 161.4 | 189 | 6.4 | 8.8 | 2.0 | 2.1 |
| 3/4 | 3/4 | EZ06NB6 | 181.9 | 216 | 6.4 | 8.8 | 2.0 | 2.1 |
| 3/4 | 1-1/4 | EZ06NBA | 272.7 | 248 | 7.7 | 10.8 | 2.3 | 3.2 |
| 1 | 1-1/4 | EZ08NBA | 311.4 | 273 | 7.7 | 10.8 | 2.3 | 3.2 |
| 1-1/4 | 1-1/4 | EZ0ANBA | 368.2 | 291 | 7.7 | 10.8 | 2.3 | 3.2 |

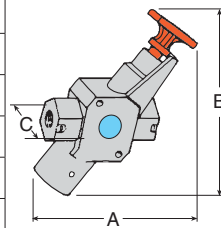


* NPT ports standard, for BSPP ports, change 4th digit from “N” to “B”

LV / EZ Accessories



Visual Pop-up Indicator – Part # 988A30

- Visual verification of line exhaust to comply with regulations
- Can be used on all LV or EZ part numbers

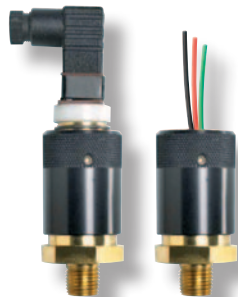

Pressure Switch – Part # PPS1-2C3-RHM (DIN 9.4mm)

- Signal verification of line exhaust
- Can be used on all LV, LVSS, or EZ part numbers
- Replace trailing “HM” with “WL” for 18” leads
- Add “8” after the “2” for BSPP threads
- Field adjustable set pressure point



High Flow Silencers

| Part Number * | ES25MC | ES37MC | ES50MC | ES75MC | ES100MC | ES125MC | ES150MC | ES200MC |
|---------------|--------|--------|--------|--------|---------|---------|---------|---------|
| Pipe size | 1/4 | 3/8 | 1/2 | 3/4 | 1 | 1-1/4 | 1-1/2 | 2 |
| Flow (scfm) | 129 | 219 | 549 | 893 | 1013 | 1486 | 1580 | 1580 |

* NPT ports standard, for BSPT ports, add a “B” after the “S”