

Grease Jockey[®] Chassis Lubrication System

312054K

EN

Bulletin GJ-30050

For on-board, automatic lubrication of trucks and heavy-use vehicles. For professional use only.

Maximum Working Pressure: See Technical Data, page 20



Important Safety Instructions





Read all warnings and instructions in this manual. Save these instructions.











ti26685a

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbol refers to procedure-specific risk. Refer back to these warnings. Additional, product-specific warnings may be found throughout the body of this manual where applicable.

 WARNING	
	<p>FIRE AND EXPLOSION HAZARD</p> <p>When flammable fluids are present in the work area, such as gasoline and windshield wiper fluid, be aware that flammable fumes can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> • Use equipment only in well ventilated area. • Eliminate all ignition sources, such as cigarettes and portable electric lamps. • Keep work area free of debris, including rags and spilled or open containers of solvent and gasoline. • Do not plug or unplug power cords or turn lights on or off when flammable fumes are present. • Ground all equipment in the work area. • Use only grounded hoses. • If there is static sparking or you feel a shock, stop operation immediately. Do not use equipment until you identify and correct the problem. • Keep a working fire extinguisher in the work area.
	<p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> • Do not operate the unit when fatigued or under the influence of drugs or alcohol. • Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Data in all equipment manuals. • Use fluids and solvents that are compatible with equipment wetted parts. See Technical Data in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS forms from distributor or retailer. • Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only. • Do not alter or modify equipment. • Use equipment only for its intended purpose. Call your distributor for information. • Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. • Do not kink or over bend hoses or use hoses to pull equipment. • Keep children and animals away from work area. • Comply with all applicable safety regulations.
	<p>ELECTRIC SHOCK HAZARD</p> <p>Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> • Turn off and disconnect power at main switch before disconnecting any cables and before servicing equipment. • Connect only to grounded power source. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.

 WARNING	
  	<p>SKIN INJECTION HAZARD</p> <p>High-pressure fluid from dispense valve, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> • Do not point dispense valve at anyone or at any part of the body. • Do not put your hand over the end of the dispense nozzle. • Do not stop or deflect leaks with your hand, body, glove, or rag. • Follow Pressure Relief Procedure in this manual, when you stop spraying and before cleaning, checking, or servicing equipment.
	<p>MOVING PARTS HAZARD</p> <p>Moving parts can pinch or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure in this manual. Disconnect power or air supply.
	<p>BURN HAZARD</p> <p>Equipment surfaces and fluid that's heated can become very hot during operation. To avoid severe burns, do not touch hot fluid or equipment. Wait until equipment/fluid has cooled completely.</p>
	<p>PRESSURIZED ALUMINUM PARTS HAZARD</p> <p>Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use can cause serious chemical reaction and equipment rupture, and result in death, serious injury, and property damage.</p>
	<p>PERSONAL PROTECTIVE EQUIPMENT</p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> • Protective eyewear • Clothing and respirator as recommended by the fluid and solvent manufacturer • Gloves • Hearing protection

Installation

Fill all lube points with grease before removing zerk fittings to change to tube connector fittings. This ensures each lube point will readily accept grease.

Pump Mounting

NOTE: A pump mounting bracket is available. Contact your Graco distributor.

The pump inlet is gravity fed, therefore the pump must be set vertically.

Select a location that is:

- visible
- accessible for filling the reservoir
- protected

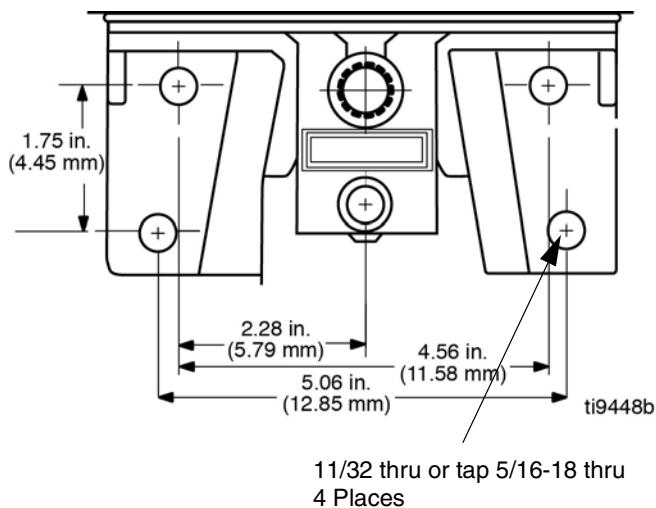


FIG. 1

Air Operated Pump

Solenoid Installation

Be sure you have the correct voltage to match your vehicle's electrical system.

1. Apply thread sealant to fitting threads (A).
2. Thread fitting (A), to the bottom of the pump. Hand tighten only.
3. Use an open end wrench to tighten fitting. Side port of fitting must point toward rear of vehicle.
4. Apply thread sealant to solenoid threads (B).
5. Thread solenoid (B) to the side port on fitting (A). Wrench tighten.
6. Apply thread sealant to plug threads (C).
7. Thread plug (C), to the bottom of fitting (A). Wrench tighten.
8. Reconnect air line.
9. Attach electric connector.

The completed installation should look like FIG. 2.

A 22-ft (6.7 m) harness wire kit to supply the signal from the timer is available (Parts, page 16). This harness comes with a weather tight connector to mate with the solenoid connector (FIG. 2).

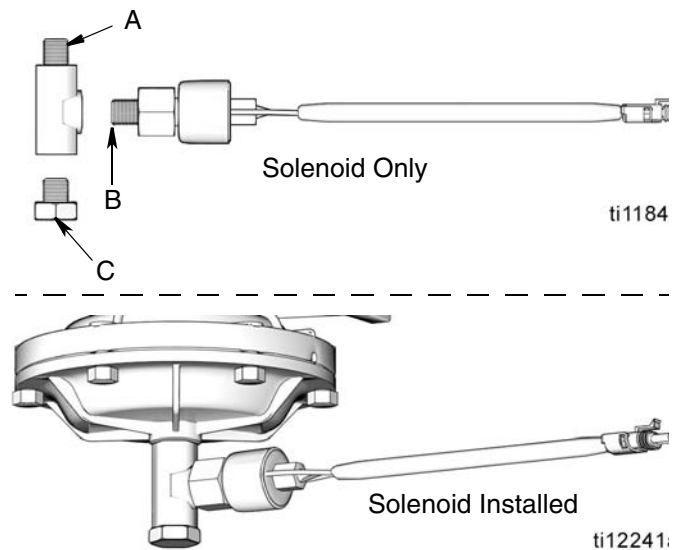


FIG. 2

Timer Installation

1. Install timer horizontally in a protected, but easily accessible location, inside the truck cab using the 4 mounting screws provided (FIG. 3).
2. Connect timer leads to solenoid. A wiring harness kit with a mating connector is available from your Graco distributor.

Mating Harness

- 127899 - 8 inch harness with DELPHI 56 connector
- 127900 - 8 inch harness with DELPHI 280 connector
- 24P314 - 5 foot harness with flying leads

NOTE: All connections between timer and solenoid must be moisture-proof and safe from grounding.

NOTICE

Do not ground the yellow wires to the solenoid. This could cause damage to the timer.

3. Connect the red lead wire to the positive side of the vehicle ignition switch. Install a 5 amp fuse at this connection.
4. Connect the black lead wire to the chassis ground.
5. See instruction manual 334662 for the Timer Setup instructions.

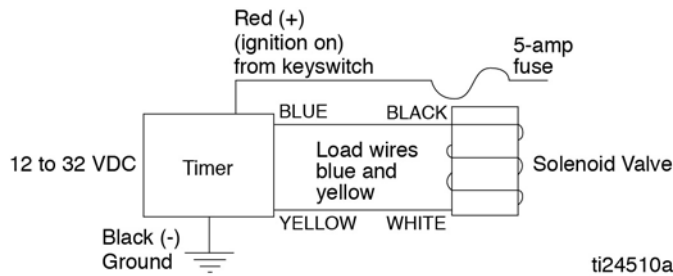
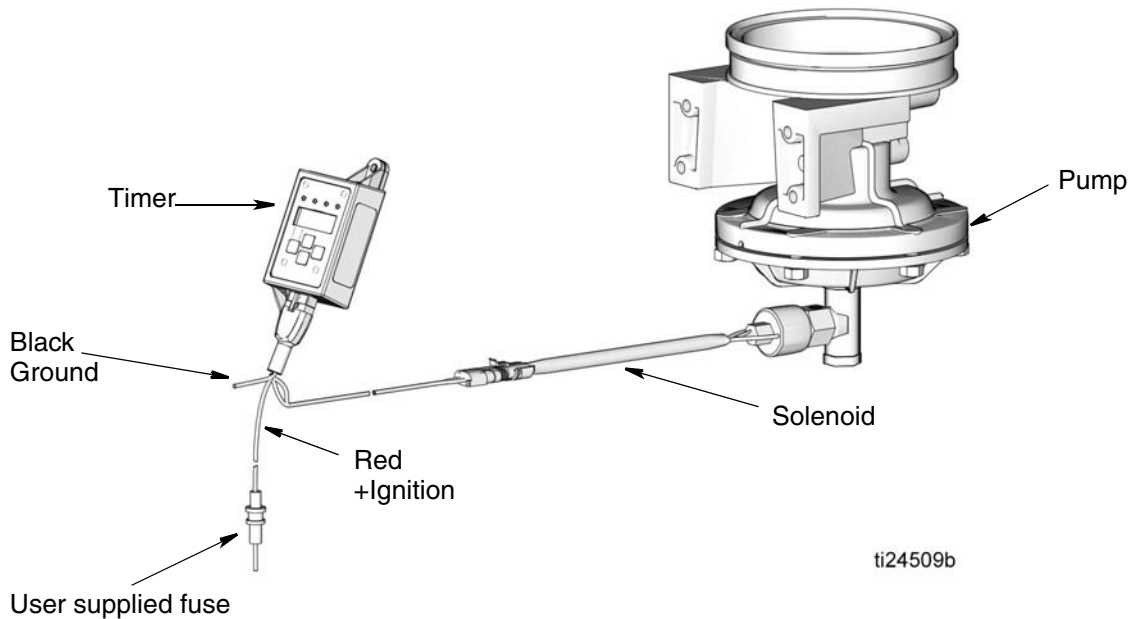


FIG. 3

Modules

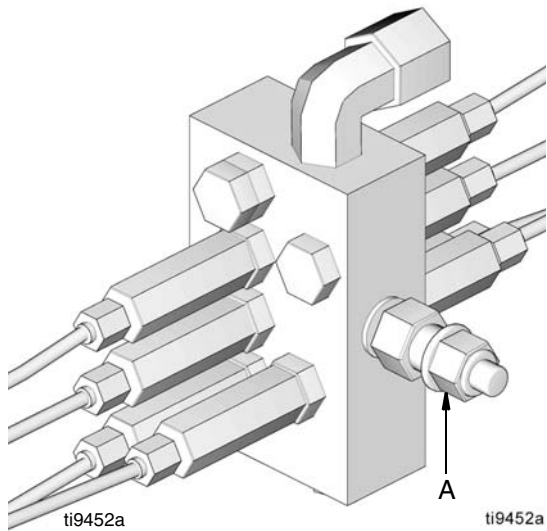


FIG. 4

- Modules (Fig. 6) are mounted with a ported stud (A) through a 5/8 in. (16 mm) hole.
- Mount all modules on the frame rail or a cross member close to the points they will be lubricating.
- Grease Jockey kits come with module assemblies for each strategic area of the chassis to be lubricated: Left Front (FIG. 5), Right Front (FIG. 6), Rear Axle(s) (FIG. 7) and Fifth Wheel (FIG. 8).
- The unused ports in the manifolds should have plugs in them. If additional lube points are needed these plugs can be replaced with appropriate sized meters and lines.

Left Front Module (FIG. 5)

The Left Front Module assembly contains meters, hardware and tubing for:

- 2 king pins,
- 1 spring pin,
- 2 spring shackle pins,
- 1 tie rod,
- 2 drag links,
- 1 S-cam,
- 1 slack adjuster lube points.
- Optional points from this module typically are linkage and steering box points.

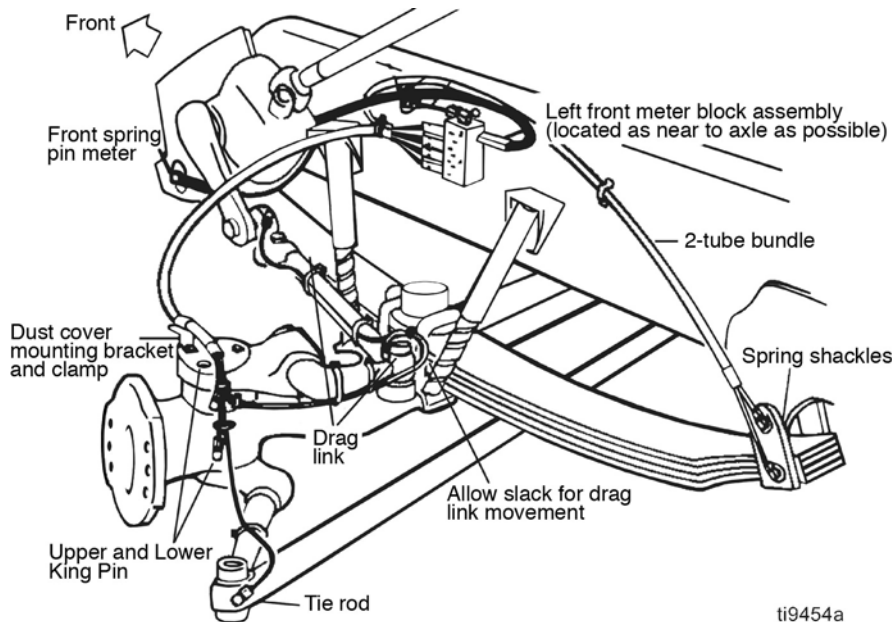


FIG. 5

Right Front Module (FIG. 6)

The Right Front Module assembly contains meters, hardware and tubing for:

- 2 king pins,
- 1 spring pins,
- 2 spring shackles,
- Optional points from this module typically may be body pivot pins.
- 1 tie rod,
- 2 clutch cross shafts,
- 1 S-cam, and 1 slack adjuster lube points.

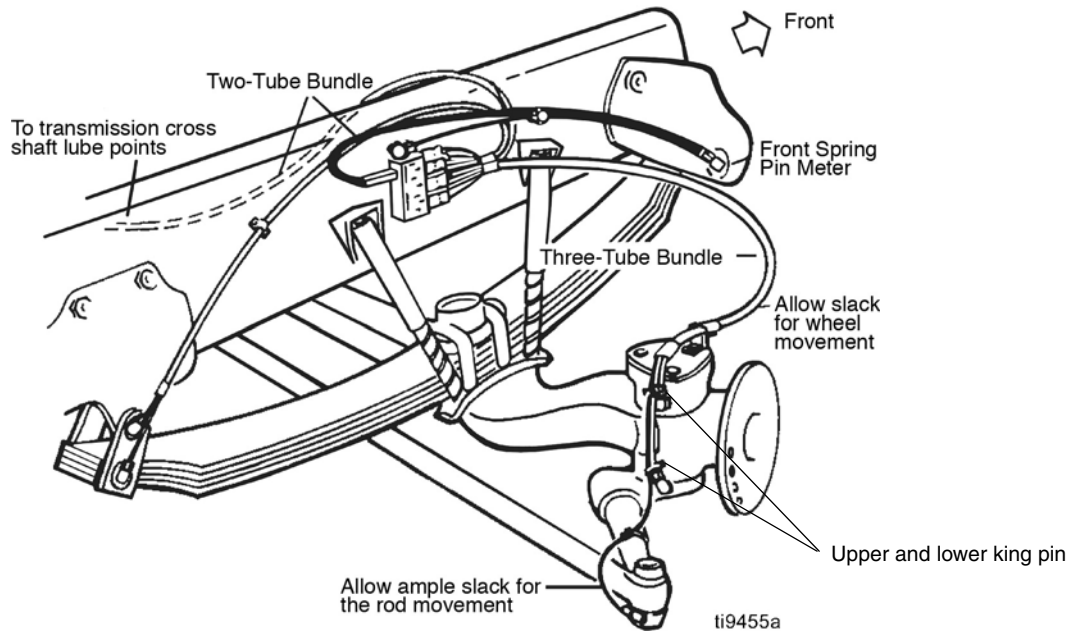


FIG. 6

Rear Axle(s) (FIG. 7)

This assembly contains the meters, hardware, and tubing for:

- (2 or 4) S-cams
- (2 or 4) slack adjuster lube points. The number of points is determined by the application (single or tandem axle).
- Optional points for this module may be spring pin points or trailer system meters.

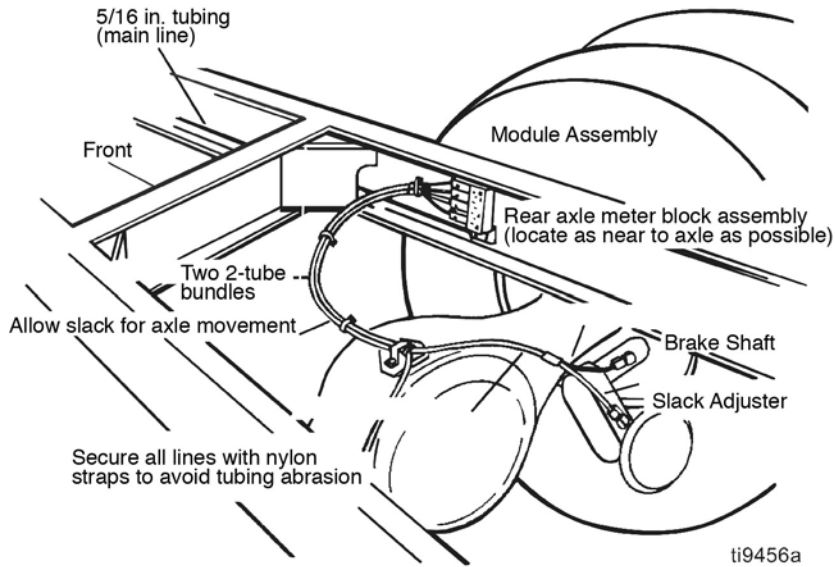


FIG. 7

Fifth Wheel (FIG. 8)

This assembly contains the meters, hardware, and tubing for:

- 4 face plates
- 2 pivot pin lube points.

NOTE: Most 5th wheel plates do not have grease fittings in the plate. This requires four holes to be drilled and tapped (1/8 in. npt) through the plate. These meters should be #8.

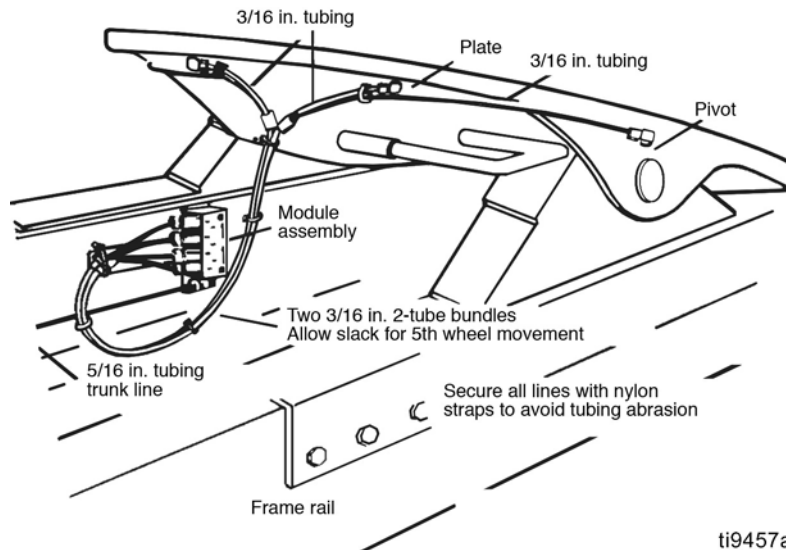


FIG. 8

Tubing

NOTICE

- When installing the tubing avoid routing it close to a heat source such as an exhaust manifold, muffler, turbocharger, etc.
- Non-approved nylon or air brake tubing should not be used.
- Always use approved 3/16 in. (5 mm) and 5/16 in. (8 mm) OD tubing.

The 3/16 in. (5 mm) tubing comes in three configurations.

- Single tubes: black or orange,
- 2 tube bundles: black with an orange tube inside sheath.
- 3 tube bundle: black, blue and orange tube inside a sheath.
- The orange tube is connected to the highest output meter.
- The blue tube is connected to a lesser or equal output meter.
- The black tube is connected to the lowest or equal output meter of the bundle group.

Preparation

1. Measure approximate lengths of tube bundles, leaving extra length for trimming at the lube points.
2. Cut the outside sheath on tube bundles back to the point where this bundle meets it's first lube point. **Be careful not to puncture or cut the tubes inside.** Use a stripper to help prevent damage to the tubes.
3. Peel back the outside sheath onto itself to create a collar and cut off the excess. **Be careful not to sever the remaining sheath or tubes.**
4. Align tubing with fitting. Make cuts square and clean with an anvil type cutter.
5. Allow ample slack for tube movement and ease of installation.

Installation

A self aligned ferrule is supplied with all 3/16 in. and 5/16 in. fittings. It is not necessary to remove the nut and ferrule to seat the tube into the fitting.

1. Make sure the tube is well seated into each fitting. Brass inserts are supplied with kits for use with 5/16 in. tubing. These inserts **must** be used at every 5/16 in. connection.
2. Route the 5/16 in. main line tube from the pump to the manifolds.

NOTE: The 5/16 in. main line tube may also be used as the air supply line to the solenoid. It should be routed inside the frame for protection and well secured.

Filling System and Start Up

NOTICE

- The Grease Jockey system is designed to pump lightweight fluid greases and oil over a wide range of conditions.
- Choose a lubricant compatible with the system's operating temperature.
- Use lubricant part number 557941, or a quality NLGI "0" or "00" lithium base grease with an "EP" additive.
- Systems using fluid grease:
 - **MUST** use NGLI grade "00" grease at temperatures below 50°F (10 °C).
 - **MAY** use NGLI grade "0" or "0" at temperatures above 50°F (10 °C).

Rigid Reservoir Fill and Refill

1. Fill reservoir through fill stud. Pump output port should be connected to system or plugged to avoid spillage.
2. Fill reservoir to full line. Do not overfill.

Reducing Grease in Reservoir When Overfilled

Follow this procedure to reduce the grease in the reservoir if the pump is accidentally overfilled.

1. Disconnect the main line from the pump or at the first module.

Installation

2. Cycle pump with the timer on “test” for a few minutes until the level of grease is acceptable. Be sure to capture grease.
3. In rigid reservoir, clean breather tube of residual grease.
4. Return timer to original setting and reconnect main line.

Pump Filter

The pump assembly contains a filter to remove impurities and dirt that may be present in the lubricant used to fill the reservoir.

Clean filter after every four or five reservoir refills. To clean the filter:

1. Remove the quick fill fluid fitting.
2. Remove the filter and clean with solvent or compressed air as appropriate.
3. Replace filter in pump body, flanged end facing out.
4. Reassemble the quick fill fluid fitting.

A mating female quick disconnect is available. Contact your Graco distributor. Order part number 557877.

Adjusting Grease Output Volume

If a meter is not producing the correct amount of lubricant for a specific location on a vehicle or if a replacement meter of correct size is not available, output spacer washers can be installed to adjust the meter's output volume.

Use Table 1 to determine which size meter is appropriate for the grease location.

TABLE 1: Meter Identification and Usage				
Meter Size	Number of Washers	Hex Flat	Output (in. ³)	Recommendations for Specific Lubrication Points
0	0	No	0.002	Brake Shafts, transmissions, cross shafts, "S" cams
1	1	No	0.005	Slack adjusters, 5th wheel pivot, and miscellaneous points
2	2	No	0.009	Drag link, tie rod ends, power steering linkage
3	3	No	0.012	Kin pins, spring pins, spring shackles
4	4	No	0.015	Miscellaneous points
8*	4	Yes	0.026	5th Wheel plate

*Size 8 high output meters cannot be changed.

To change output volume:

1. Relieve pressure, page 12.
2. If the meter is located on a manifold, use a 7/16" wrench to remove tubing (FIG. 9).

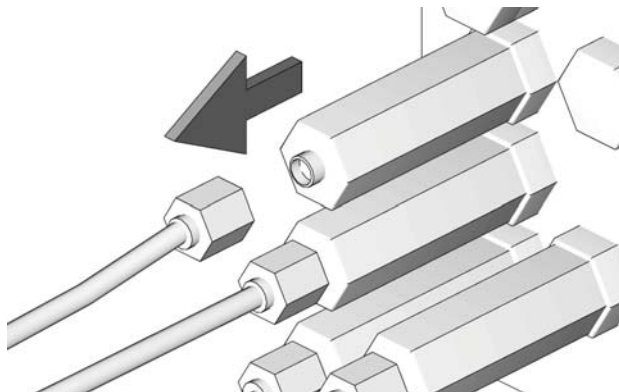


FIG. 9

3. Use a 5/8" deep well socket to remove meter from manifold (FIG. 10).

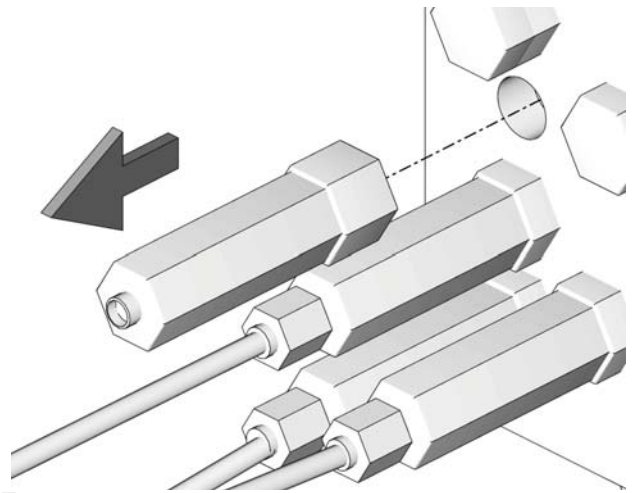


FIG. 10

4. Place meter in a vise, output end (tube connector) facing up.
5. Use two 5/8" wrenches to separate the meter halves.
6. Separate the meter body from the valve assembly. Be careful not to misplace or damage springs

and/or o-rings that may be attached (FIG. 11).

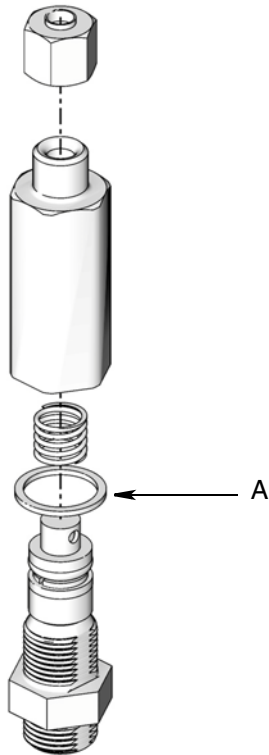


FIG. 11

7. Add or remove output spacer washers (A) from the meter valve assembly.

NOTE:

- Add spacer washers (A) to increase output volume.
 - Remove spacer washers (A) to decrease output volume.
8. Reassemble meter body on meter valve assembly. Use a 5/8" wrench to tighten using only enough

force to seat output washers firmly (FIG. 12).

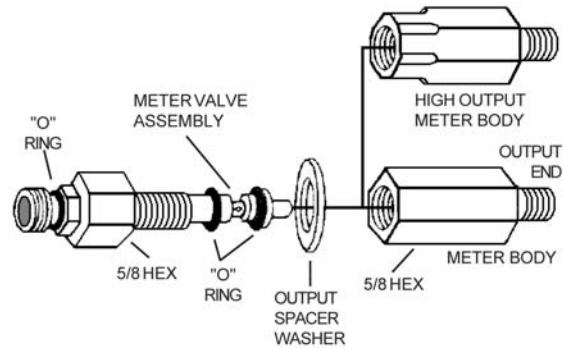


FIG. 12

9. Align hex flats so a deep well socket will slide down to the meter body for assembly onto manifold.
10. Reassemble meter onto manifold using the 5/8" deep well socket. Torque to 2-3 ft.-lbs.

NOTICE

Do not exceed 12 ft-lbs torque or meter damage may occur.

11. Hand tighten the tube nut onto the meter and tighter 1/8 turn beyond hand tight.

NOTE: Tube nuts can be reused a maximum of 8 times after the initial tightening.

12. Reconnect tubing to manifold using a 7/16" wrench to securely tighten fitting.

Pressure Relief Procedure

NOTE:

- Check the vehicle air supply. At least 100 psi (0.7 MPA, 7 bar) gauge pressure is required.
 - All the air must be removed from the main lines and manifolds.
1. Remove all 1/4 npt end port and 1/8 npt stud plugs on the module manifolds.
 2. With the vehicle ignition switch turned ON, set timer to the test position and press MANUAL RUN.
 3. As the pump cycles, check the open module ports for flow of grease with no air.

4. Check the open port closest to the pump first, proceeding to the port furthest from the pump last. This will push out the air in the main line(s).
5. When the flow of grease from a port is free of air, close the port and continue this process until all ports have been checked.

NOTE: The 3/16 in. (5 mm) distribution lines are pre-filled. They should not require purging of air.


6. Let the system run in the test position for a few minutes. Check all line connections to be sure they are holding pressure. Check at lube points to be sure lubricant is moving to this point in the system.
7. Reset the timer to the desired setting for your application. Use the following table as a starting point:

Recommended Timer Setting	
Timer Setting	Driving Conditions
1/2 or 1 hr	Off Highway
1.5 or 2 hr	Start and stop city, heavy salt, snow and ice, rough pavement, wet climate, heavy loads, dusty roads.
3 hr	Normal city or highway driving, normal climate, moderate loads.

NOTE: These are recommended settings only. Experience with individual applications will determine timer setting.

If any part of the system has not functioned as it should, refer to Troubleshooting, page 14.


Troubleshooting



Problem	Cause	Solution
Too much grease at all lube points	Timer cycle too frequent	Adjust the timer one click to a higher time cycle. (Example, from 2 to 3 hours.)
Too much grease at one lube point	Meter leaking	Remove and replace meter
Not enough grease at all lube points	Timer cycle is too infrequent	Adjust the timer one click to a lower time cycle. (Example, from 3 to 2 hours.)
No sign of fresh grease at all points	Lubricant reservoir filled with heavy grease which will not work in system.	Remove and clean reservoir, refill with proper lubricant. Remove main line plugs from meter blocks, and cycle pump until old lubricant is removed from lines, replace main line plugs.
	Blown fuse, or break in wiring circuit	Check for electrical short circuit or broken wire, and repair.
	Broken air line (air pump only)	Repair or replace line.
	Inoperative solenoid air valve (Air pump only)	Check electrical circuit to make sure voltage is reaching the solenoid coil from the timer. Connect a meter from the supply "black" wire to the return "white" wire at the connector of the solenoid. Do not connect direct to ground. Repair or replace wiring as required: Check coil resistance for approx. 20 ohms. Check valve operation; repair or replace if necessary.
	Inoperative air pump	See Troubleshooting, Air-operated pump not working, page 15.
	Main line broken	See Troubleshooting, Main tube line damaged, page 15.
	None of the above	Using 2500 PSI pressure gauge, check for pressure at last module in system. The minimum gauge reading should be 500 PSI. If not, check pressure at pump. Pressure should reach 1000PSI. If it does, check for blocked, broken or collapsed main line. Otherwise repair or replace pump.
No sign of fresh grease at some lube points	Main line broken	See Troubleshooting, Main tube line damaged, page 15.
	Air lock in main line	Purging Air From the Mainline; Step 7, page 13.
No sign of fresh grease at one lube point	Secondary line damaged	See Troubleshooting, Secondary line damaged, page 14.
	Meter inoperative	Replace meter.
	Lube point fitting has broken off	Remove broken fitting and replace

Problem	Cause	Solution
Main tube line damaged	Trapped and broken, rubbed through	Replace or repair (re-route or protect the line to prevent the damage from happening again). Purge with grease to expel air before connecting new main line into system. Be sure to use a tube insert at all main line connections.
	Main line has popped out of fitting	Refit line to the fitting using a new compression sleeve and a tube insert.
Secondary line damaged	Trapped and broken, rubbed through	Replace or repair (re-route or protect the line to prevent the damage from happening again).
	Secondary line has popped out of fitting	Refit line to the fitting using a new compression sleeve.
	Lube point fitting has broken off	Remove broken fitting and replace.
Air-operated pump not working	Solenoid valve not working	See Troubleshooting, No sign of fresh grease at all points "Inoperative solenoid air valve", page 14.
	Air line damaged	Repair or replace if necessary.
	Low air pressure	Build up air pressure in truck system.
	Electrical circuit to timer or solenoid is damaged	Check connections; repair or replace if necessary.
	Timer is not working	Repair or replace timer.

Rebuilding Grease Jockey Pump

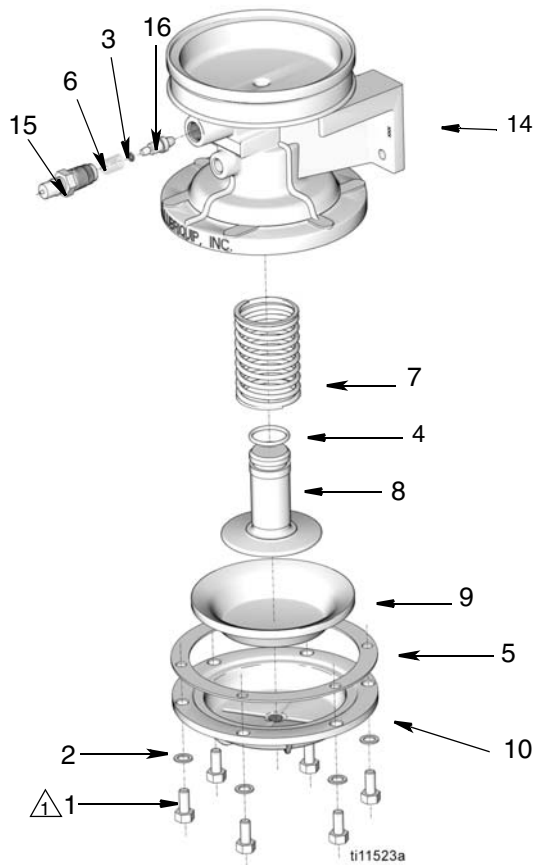

Ref.	Description	Qty.
1	SCREW, 3/8" x 3/4"	6
2	WASHER, flat, 3/8"	6
3	O-RING, fluoroelastomer A, 70 DURO, 1/16"	1
4	O-RING, fluoroelastomer A, 70 DURO, 1/8"	1
5	GASKET, pump	1
6	SPRING, check valve	1
7	SPRING, return, piston	1
8	PISTON, lube	1
9	DIAPHRAGM	1
10	COVER, chamber	1
14	BODY, pump	*
15	FITTING, coupling 3/8" x 1/4"	*
16	PISTON, check valve	*

* For reference only. Not included in kit.



 Torque to 15-22 ft.-lbs (20-30 N.m) and apply Loctite® 242

FIG. 13

Use Pump Rebuild Kit 563762. Numbers in parentheses refer to FIG. 13.

Piston Chamber Repair



1. Remove the grease mainlines from the pump.
 2. **Relieve Pressure**, page 12. Remove air supply line and electrical connector from solenoid valve.
 3. Remove pump from vehicle.
- It may be necessary to empty reservoir of grease for remaining steps.*
4. Turn pump upside down to remove bottom air chamber cover screws.

5. Using a 9/16" wrench, remove solenoid valve from cover (10) by unscrewing the brass nipple from the pump body.
6. Using a 9/16" wrench, remove six hex screws (1) and washers (2) from cover. Use care in removing the last screw since the internal components are under compression and the cover will pop off. Discard all screws and washers.
7. Remove the diaphragm (9) and any fragments of the gasket (5) and discard.
8. Remove the piston (8) and spring (7) from the pump cavity. Discard both the piston and spring.
9. Remove o-ring (4) from top of piston and discard.
10. Clean excess grease, grit and dirt from the inside of the pump with a clean paper or cloth towel. Check

piston cavity for scoring or scrapes. Clean piston. Make sure there are no fibers from cloth left behind.

11. Check to make sure flapper valve is visible and loose in top of piston cavity. If flapper is not visible or frozen in place, the pump cannot be repaired. Replacement part number is 563625.
12. Assemble new o-ring and new spring to the new piston and insert in pump. To aid in reinsertion, apply a small amount of grease to the o-ring.
13. Position new diaphragm on piston. Make sure orientation is according to FIG. 13.
14. Position new gasket and cap back onto pump and screw into place. Replace o-ring and hex screws. Torque to 15-22 ft.-lbs. Alternate tightening screws around cover to avoid excessive tilting of cover.

Check Valve Repair

1. Using a 3/4" wrench, remove fill stud fitting (15) from pump body.
2. Using a 5/16" wrench, remove check valve spring (6), o-ring (3) and check valve piston (16). Discard spring and o-ring.
3. Clean cavity with clean paper or cloth towel. Make sure no fibers are left in the cavity.
4. Replace o-ring (3) and reinstall check valve piston in cavity. Make sure piston is properly oriented in cavity -- o-ring on the outside end.
5. Install new check valve spring (6) in cavity.
6. Apply pipe dope to fitting (15) and reinstall.

Assembling Pump Onto Vehicle

1. Assemble pump onto vehicle.
2. Connect solenoid air supply line to the side port of the solenoid.
3. Reconnect solenoid electrical harness.
4. If reservoir was emptied, refill with appropriate grease.

5. After vehicle air pressures has reached a minimum of 100 psi (6.89 bar, 0.689 MPa):

- turn ignition to ON
- Timer to TEST position
- push the MANUAL RUN button

Watch the pump outlet for grease flow.

6. Once grease flows from the outlet:

- stop the cycling
- return the timer to the original setting
- reconnect the mainline to the pump

NOTE: Any tube nut can be removed and reconnected up to 8 times. to reattach, hand tighten up to original make-up position plus 1/16 turn to seat ferrule.

7. Pump can now be returned to service.

Kits

Installation Kits

Part No.	Description
563762	Air pump repair/rebuild kit
563931	Soft to hard conversion kit

Manual Trailer Kits

Part No.	Description
563805	6 pt single axle system
563806	12 pt tandem axle system
563807	5 pt landing gear system

Miscellaneous Accessories

Part No.	Description
247886	Filler pump assembly, 35 lb. pail
557941	35 lb pail, grease, NLGI "00" non-Moly
557878	Reservoir strap
563589	Air pump assembly with 6 lb rigid reservoir
563774	6 lb reservoir replacement kit
24W482	Grease jockey timer
25A118	Timer with cable
24W479	Timer with cable, Delphi 56
24W480	Timer with cable, Delphi 280
557932	12 VDC solenoid valve kit
24E017	24 VDC solenoid valve kit
563641	12 VDC solenoid valve kit
563642	Wire lead, 22 ft for solenoid valve
563627	Meter valve, #0
563629	Meter valve, #1
563631	Meter valve, #2
563633	Meter valve, #3
563635	Meter valve, #4
563637	Meter valve, #8

Part No.	Description
557901	Meter output port plug
557898	Meter output sizing spacer
563758	12 port manifold with stud
563946	Replacement stud
15M038	Manifold meter port plug
558058	Tube stripper
563786	Distribution lines, 3/16 inch OD tubing bundle, pre-filled, 1 tube black
563788	Distribution lines, 3/16 inch OD tubing bundle, pre-filled, 2 tube bundle
563783	Distribution lines, 3/16 inch OD tubing bundle, pre-filled, 3 tube bundle
561132	Main line tubing, 5/16 inch OD x 60 feet
557963	5/16 inch tubing insert, package of 20
563770	Nylon straps, package of 100
557943	Clamp, 5/16 inch, 9/32 inch hole
557946	Clamp, 3/8 inch, 9/32 inch hole
557944	Clamp, 7/16 inch, 9/32 inch hole
557947	Clamp, 1/2 inch, 9/32 inch hole
557945	Clamp, 5/8 inch, 9/32 inch hole
556660	Nut, tube with captive sleeve, 3/16 inch
556666	Nut, tube with captive sleeve, 5/16 inch
556644	Male connector, 1/8 NPT, 3/16 inch tube
556645	Male connector, 1/8 NPT, 5/16 inch tube
556646	Male connector, 1/4 NPT, 5/16 inch tube
556638	Male 90° elbow, 1/8 NPT, 3/16 inch tube
556639	Male 90° elbow, 1/8 NPT, 5/16 inch tube
556640	Male 90° elbow, 1/4 NPT, 5/16 inch tube
562995	Fitting adapter, straight, 1/4 inch-28 SAE x 3/16 inch tube
15K740	Elbow, street, 1/8 inch NPT to 1/4 inch-28 SAE, standard

Part No.	Description
15K784	Elbow, street, 1/8 inch NPT to 1/4 inch-28 SAE, short
15K783	Elbow, street, 1/8 inch NPT to 1/8 inch NPT, 90°
557395	Elbow, street, 1/8 inch NPT to 1/8 inch NPT, 45°
560534	Elbow, street, 3/8 inch NPT to 3/8 inch NPT, 90°
557955	Straight adapter, 1/8 inch NPT to 1/4 inch-28 SAE, male
15M037	Adapter, press to fit, 1/8 inch NPT (replaces unthreaded grease fittings)
556647	Union, tube, 3/16 inch tube
556648	Union, tube, 5/16 inch tube
556636	Tee, male branch, 1/8 inch NPT to 5/16 inch tube
556637	Tee, tube, union, 5/16 inch tube
557950	Bulkhead fitting
557392	Extension, 1/8 inch NPT, 3/4 inch
557393	Extension, 1/8 inch NPT, 1-1/4 inch
563776	Zerk adapter, press on, 3/16 inch tube connection elbow
563777	Zerk adapter, press on, 3/16 inch tube connection, straight
557966	Universal pump mounting bracket
121474	Reservoir fill coupling, female, 1/4 inch NPT female
557880	Reservoir fill coupling, male, 3/8 inch NPT male
557875	Dust cap
25A044	Service startup kit, includes solenoid tubes, fittings, inserts

Technical Data

Timer (Air Operated Pump)

Input Power	12 -24 VDC
Timer Intervals	0.5, 1, 1.5, 2, 3, 4, 6 hours
Wire Termination	Packard Connector

Air Solenoid

Type	3-Way, Normally-Closed, Free Venting
Input Power	12 or 24 VDC, 9 Watt Continuous Duty Coil
Inlet Port	1/8 npt threads
Outlet Port	1/4 npt threads
Maximum Working Pressure	150 psi (1.05 MPa, 10.5 bar)

Air Operated Pump

Ratio	9:1
Output per Stroke	1.5 in ³ (24.58 cc)
Inlet Pressure (air)	40 - 150 psi (0.28 - 0.35 MPa, 2.8 - 3.5 bar)
Outlet Pressure (lubricant)	360 - 1350 psi (2.5 - 9.4 MPa, 25.2 - 94.5 bar)
Operating Temperature	-4 to 135°F (-20 to 57.2 °C)
Fluid Compatibility	Oil and Grease, NLGI #0 or lighter

Modules (includes tubing, manifolds and meters)

Manifold

Maximum Working Pressure	2,500 psi (17.5 MPa, 175 bar)
------------------------------------	-------------------------------

Meters

Maximum Working Pressure	2,000 psi (13.7 MPa, 137 bar)
Minimum Operating Pressure	450 psi (3.2 MPa, 31.5 bar)
Vent Pressure	160 psi (1.1 MPa, 11.2 bar)
Minimum Cycle On Time	30 seconds
Minimum Cycle Off Time	3 minutes

Tubing

5/16" OD Main Line Maximum Working Pressure . . .	375 psi (2.6 MPa, 25.8 bar)
3/16" OD Distribution Line Maximum Working Pres- sure	800 psi (5.5 MPa, 55 bar)

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6928 **or Toll Free:** 1-800-533-9655, **Fax:** 612-378-3590

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

For patent information, see www.graco.com/patents.

Original instructions. This manual contains English. MM 312054

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2008, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com
Revised July 2015