
# **ILB IB 24 DI32**

# Inline Block IO Module for INTERBUS With 32 Digital Inputs

#### **AUTOMATION**

Data Sheet 6886\_en\_02

© PHOENIX CONTACT - 09/2007

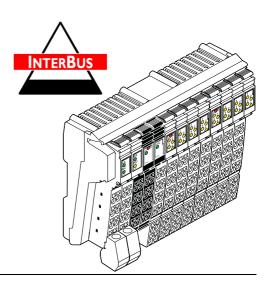

## **Description**

The ILB IB 24 DI32 module is designed for use within an INTERBUS network. It is used to acquire digital signals.

#### **INTERBUS Features**

- Remote bus connection via Inline connector
- Transmission speed 500 kbps
- Diagnostic and status indicators

#### **Input Features**

- Connections for 32 digital sensors
- Connection of sensors in 2 and 3-wire technology
- Maximum permissible load current per sensor: 125 mA
- Maximum permissible load current from the sensor supply: 2 x 2.0 A
- Diagnostic and status indicators



Please refer to the "Mounting and Removing Inline Block IO Modules" application note (see "Ordering Data" on page 2).



Make sure you always use the latest documentation. It can be downloaded at <a href="https://www.download.phoenixcontact.com">www.download.phoenixcontact.com</a>.



# **Ordering Data**

#### **Product**

Description	Туре	Order No.	Pcs./Pkt.
Inline Block IO module for INTERBUS with 32 digital inputs	ILB IB 24 DI32	2862343	1

#### Accessories: Connectors as Replacement Item

Description	Туре	Order No.	Pcs./Pkt.
Shield connector for INTERBUS connection (color print)	IB IL SCN-6 SHIELD-CP	2863151	5
Connector for the supply (color print)	ILB SCN-PWR IN-CP	2727637	10
Connector, with color print, for digital 4-channel or 16-channel Inline input terminals	IB IL SCN-12-ICP	2727611	10

#### **Accessories: Other**

Description	Туре	Order No.	Pcs./Pkt.
Recommended end clamp; placed both to the right and left of the module to secure it on the DIN rail	CLIPFIX 35-5	3022276	50

#### **Documentation**

Description	Туре	Order No.	Pcs./Pkt.
"Mounting and Removing Inline Block IO Modules" application note	AH ILB INSTALLATION	9014931	1
"INTERBUS Addressing" data sheet	DB GB IBS SYS ADDRESS	9000990	1
"Addressing of 32-Channel ILB Modules" application note	AH ILB 24 DI/DO 32 ADDRESS	9014963	1
"General Introduction to the INTERBUS System" user manual	IBS SYS INTRO G4 UM E	2745211	1

## **Technical Data**

General Data	
Housing dimensions with connectors (width x height x depth)	156 mm x 55 mm x 141 mm
Weight	405 g (with connectors)
Operating mode	Process data mode with 2 words
Transmission speed	500 kbps
Connection method for sensors	2 and 3-wire technology

#### **Housing Dimensions**

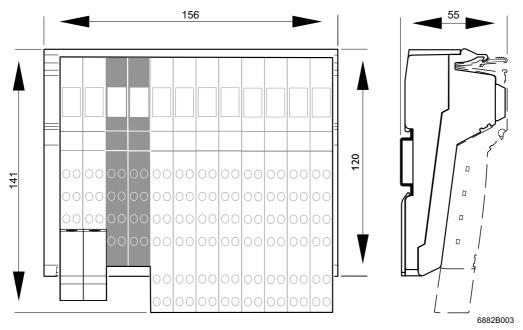


Figure 1 Housing dimensions of the module (dimensions in mm)

Ambient Conditions	
Regulations	Developed according to VDE 0160/EN 50178/IEC 62103, UL 508
Ambient temperature (operation)	-25°C to +60°C
Ambient temperature (storage/transport)	-25°C to +85°C
Humidity (operation/storage/transport)	10% to 95% according to EN 61131-2
Air pressure (operation)	80 kPa to 108 kPa (up to 2000 m above sea level)
Air pressure (storage/transport)	66 kPa to 108 kPa (up to 3500 m above sea level)
Degree of protection according to IEC 60529	IP20
Class of protection	Class 3 according to VDE 0106/IEC 60536
Air and creepage distances	According to DIN VDE 0110/IEC 60664, IEC 60664A, DIN VDE 0160/EN 50178/IEC 62103
Housing material	Plastic, PVC-free, PBT, self-extinguishing (V0)
Pollution degree according to EN 60664-1/IEC 60664-1, EN 61131-2/IEC 61131-2	2; condensation not permitted during operation
Surge voltage class	II

Electrical Isolation/Isolation	of the Voltage Areas		
Test Distance	•	Test Voltage	
Incoming remote bus / outgoing remote bus		500 V AC, 50 Hz, 1 min	
		500 V AC, 50 Hz, 1 min	
Incoming remote bus / functional earth	n ground	500 V AC, 50 Hz, 1 min	
Outgoing remote bus / I/O		500 V AC, 50 Hz, 1 min	
Outgoing remote bus / functional earth	n ground	500 V AC, 50 Hz, 1 min	
I/O / functional earth ground		500 V AC, 50 Hz, 1 min	
Mechanical Requirements			
Vibration test, sinusoidal vibrations ac EN 60068-2-6/IEC 60068-2-6	cording to	5g load, 2.5 hours in each space direction	
Shock test according to EN 60068-2-2	7/IEC 60068-2-27	25g load for 11 ms, half sinusoidal wave, 3 shocks in each space direction and orientation	
Broadband noise according to EN 600	68-2-64/IEC 60068-2-64	0.78g load, 2.5 hours in each space direction	
<b>Conformance With EMC Dir</b>	ective 89/336/EEC and 2	004/108/EG	
<b>Noise Immunity Test Accord</b>	ding to EN 61000-6-2		
Electrostatic discharge (ESD)	EN 61000-4-2 IEC 61000-4-2	Criterion B 6 kV contact discharge 8 kV air discharge	
Electromagnetic fields	EN 61000-4-3 IEC 61000-4-3	Criterion A Field strength: 10 V/m	
Fast transients (burst)	EN 61000-4-4/ IEC 61000-4-4	Criterion B  Remote bus: 2 kV Power supply: 2 kV I/O cables: 2 kV Criterion A  All interfaces: 1 kV	
Surge voltage	EN 61000-4-5 IEC 61000-4-5	Criterion B  DC supply lines: ±0.5 kV/±1.0 kV (symmetrical/asymmetrical)  Signal cables: ±0.5 kV/±0.5 kV (symmetrical/asymmetrical)	
Conducted interference	EN 61000-4-6 IEC 61000-4-6	Criterion A Test voltage 10 V	
Noise Emission Test Accord	ding to EN 61000-6-4		
Noise emission of housing	EN 55022	Class B (residential)	
Interface: INTERBUS			
Incoming remote bus		Copper cable (RS-422), connected with Inline shield connector; supply electrically isolated; shielding connected with a capacitor to functional earth ground	
Outgoing remote bus		Copper cable (RS-422), connected with Inline shield connector; supply electrically isolated; shielding directly connected to functional earth ground	
Documented cable lengths		Con INTERDUC quatery data in the IDC CVC INTER CALLIM F user manual	

6886\_en\_02 PHOENIX CONTACT 4

See INTERBUS system data in the IBS SYS INTRO G4 UM E user manual

Recommended cable lengths

24 v Module Supply (Communication	ons Power and Sensor Supply; $U_L$ and $U_S$ )

Nominal value	24 V DC
Tolerance	-15%/+20% according to EN 61131-2
Ripple	±5% according to EN 61131-2
Permissible range	19.2 V DC to 30.0 V DC
Current consumption at U <sub>L</sub>	60 mA
Current consumption at U <sub>S1</sub> and U <sub>S2</sub>	2 x 2 A
Safety equipment for communications power	Surge protection and protection against polarity reversal
Safety equipment for the sensor supply	Surge, overload and short-circuit protection
Connection	Via power connectors

Digital Inputs	
Number	32
Connection method for sensors	2 and 3-wire technology
Input design	According to EN 61131-2 Type 1
Definition of switching thresholds	
Maximum low-level voltage	U <sub>Lmax</sub> < 5 V
Minimum high-level voltage	U <sub>Hmin</sub> > 15 V
Common potentials	Sensor supply U <sub>S</sub> , ground
Nominal input voltage U <sub>IN</sub>	24 V DC
Permissible range	-30 V < U <sub>IN</sub> < +30 V DC
Nominal input current for U <sub>IN</sub>	5 mA, typical
Current flow	Linear in the range 1 V < U <sub>IN</sub> < 30 V
Delay time	≤ 500 µs
Permissible cable length to the sensor	100 m

## **Power Dissipation**

Use of AC sensors

#### Formula to Calculate the Power Dissipation of the Electronics

$P_{TOT} = 1.44 \text{ W} + I_{S1}^{2} \times 0.06 \Omega + I_{S2}^{2} \times 0.06 \Omega + \sum_{i=1}^{n} 0.12 \text{ W}$	Where PTOT Total power dissipation of the module Is1 Load current at sensor supply 1 Is2 Load current at sensor supply 2 i Index n Number of set inputs (n = 1 to 32)
--	---

AC sensors in the voltage range < U<sub>IN</sub> are limited in application

#### Limitation of Simultaneity, Derating

No limitation of simultaneity, no derating

#### **Approvals**

For the latest approvals, please visit <u>www.download.phoenixcontact.com</u>.

# **Internal Circuit Diagram**

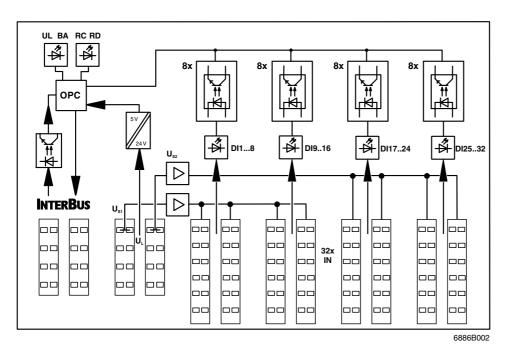


Figure 2 Internal wiring of the terminal points

Key:

₩ LED

Protocol chip (bus logic)

Power supply unit with electrical isolation

Short-circuit-proof sensor supply

# **Local Diagnostic and Status Indicators**

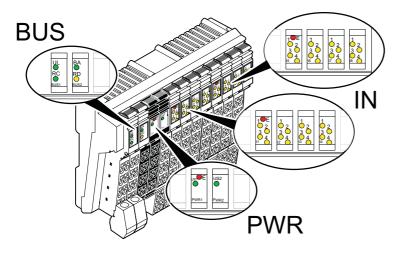


Figure 3 Diagnostic and status indicators of the ILB IB 24 DI32 module

Designation	Color	Meaning
BUS		
UL	Green	Communications power
RC	Green	Remote bus cable check
ВА	Green	Bus active
RD	Yellow	Outgoing remote bus disabled
PWR		
E	Red	Undervoltage sensor supply
US1	Green	Sensor supply 1 (connector 5 to connector 8 for sensors)
US2	Green	Sensor supply 2 (connector 9 to connector 12 for sensors)
IN		
E	Red	Short circuit or overload of the sensor supply
1 - 4	Yellow	Status indicators of the inputs

6886A005

# Connecting INTERBUS, the Supply, and Sensors

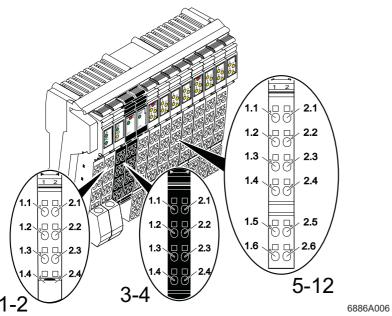


Figure 4 Terminal point assignment of the connectors

## Terminal Point Assignment of INTERBUS Connectors (Connectors 1 and 2 in Figure 4)

Terminal Po	oint Assignment	Remark/Wire Color in the INTERBUS Standard Cable							
Connector 1 (BUS 1) Incoming Remote Bus									
1.1	DO1	Receive (							
2.1	DO1	Receive	Yellow						
1.2	DI1	Transmit	Pink						
2.2	DI1	Transmit	Gray						
1.3	F-GND	Reference potential	Brown						
2.3			Not used						
1.4, 2.4	Shield Shield somected with a capacitor to functional earth ground (FE) of the potential jumper.								
Connector	2 (BUS 2) Outgoing	Remote Bus							
1.1	DO2	Transmit	Green						
2.1	DO2	Transmit	Yellow						
1.2	DI2	Receive	Pink						
2.2	DI2	Receive	Gray						
1.3	R-GND	Reference potential	Brown						
2.3			Not used						
1.4, 2.4	Shield	Shield potential is connected directly to functional earth ground (FE) of the potential jumper.							

# Terminal Point Assignment of Power Connectors (Connectors 3 and 4 in Figure 4 on page 8)

Terminal Point   Assignment									
Connector 3 (PWR 1)									
1.1, 2.1	24 V sensor supply U <sub>S1</sub>								
1.2, 2.2	24 V communications power U <sub>L</sub>								
1.3, 2.3	GND								
1.2, 2.4	FE								
Connector 4 (P	WR 2)								
1.1, 2.1	24 V sensor supply U <sub>S2</sub>								
1.2, 2.2	24 V communications power U <sub>L</sub>								
1.3, 2.3	GND								
1.4, 2.4	FE								



The terminal points can have a total current of 8 A per terminal point. The maximum current carrying capacity of 8 A must not be exceeded.



The supply points have the same ground potential. All ground supplies on a module are electrically connected with one another. The communications power is also electrically connected via all contacts. In this way, it can supply all potentials with just one supply without the need for additional terminals, see "Connection example" on page 10.

#### Terminal Point Assignment of Input Connectors (Connectors 5 to 12 in Figure 4 on page 8)

<b>Terminal Point</b>			Assignment				
Connector 5 (I1)	Connector 6 (I2)	Connector 7 (I3)	Connector 8 (I4)				
1.1, 2.1	1.1, 2.1	1.1, 2.1	1.1, 2.1	Signal input (IN)			
1.2, 2.2	1.2, 2.2	1.2, 2.2	1.2, 2.2	Sensor supply 1 for 2 and 3-wire termination			
1.3, 2.3	1.3, 2.3	1.3, 2.3	1.3, 2.3	Ground contact (GND) for 3-wire termination			
1.4, 2.4	1.4, 2.4	1.4, 2.4	1.4, 2.4	Signal input (IN)			
1.5, 2.5	1.5, 2.5	1.5, 2.5	1.5, 2.5	Sensor supply 1 for 2 and 3-wire termination			
1.6, 2.6	1.6, 2.6	1.6, 2.6	1.6, 2.6	Ground contact (GND) for 3-wire termination			
Connector 9 (I5)	Connector 10 (I6)	Connector 11 (I7)	Connector 12 (I8)				
1.1, 2.1	1.1, 2.1	1.1, 2.1	1.1, 2.1	Signal input (IN)			
1.2, 2.2	1.2, 2.2	1.2, 2.2	1.2, 2.2	Sensor supply 2 for 2 and 3-wire termination			
1.3, 2.3	1.3, 2.3	1.3, 2.3	1.3, 2.3	Ground contact (GND) for 3-wire termination			
1.4, 2.4	1.4, 2.4	1.4, 2.4	1.4, 2.4	Signal input (IN)			
1.5, 2.5	1.5, 2.5	1.5, 2.5	1.5, 2.5	Sensor supply 2 for 2 and 3-wire termination			
1.6, 2.6	1.6, 2.6	1.6, 2.6	1.6, 2.6	Ground contact (GND) for 3-wire termination			

## **Connection Example**

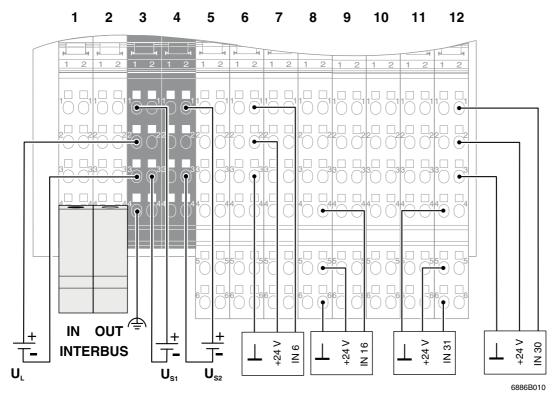


Figure 5 Connection example



The numbers above the module illustration identify the connector slots.



When connecting the sensors, observe the assignment of the terminal points to the process data (see "Process Data" on page 11).



The module has an FE spring (metal clip) on the bottom of the electronics base. This spring creates an electrical connection to the DIN rail. Use grounding terminals to connect the DIN rail to protective earth ground. The module is grounded when it is snapped onto the DIN rail.

To ensure reliable functional earth grounding of the module even when the DIN rail is dirty or the metal clip is damaged, Phoenix Contact also recommends grounding the module via one of the FE terminal points.

# **Programming Data**

ID code	02 <sub>hex</sub> (02 <sub>dec</sub> )
Length code	02 <sub>hex</sub>
Process data channel	32 bits
Input address area	2 words
Output address area	0 words
Parameter channel (PCP)	0 words
Register length (bus)	2 words

#### **Process Data**



For the assignment of the illustrated (byte.bit) view to your control or computer system, please refer to the DB GB IBS SYS ADDRESS data sheet.

Please refer to the application note for addressing 32-channel ILB modules.

The documentation can be downloaded at <a href="https://www.download.phoenixcontact.com">www.download.phoenixcontact.com</a>.

#### Assignment of Terminal Points to the IN Process Data Word (Slots 5 to 8)

(Word.bit) view	Word 0																
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
(Byte.bit) view	Byte	Byte Byte 0							Byte 1								
	Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Module	Slot	6				5 (11)				8 (14)				7 (I3)			
	Terminal point (signal)	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1
	Terminal point (+24 V)	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2
	Terminal point (GND)	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3
Status indicator	Slot	6 (I2)		5 (I1)				8 (I4)				7 (13)					
	LED	4	3	2	1	4	3	2	1	4	3	2	1	4	3	2	1

#### Assignment of Terminal Points to the IN Process Data Word (Slots 9 to 12)

(Word.bit) view	Word	ord Word 0															
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
(Byte.bit) view	Byte	Byte 0						Byte 1									
	Bit	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
Module	Slot	10 (16)				9 (	l5)			12	12 (I8)			11 (I7)			
	Terminal point (signal)	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1	2.4	1.4	2.1	1.1
	Terminal point (+24 V)	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2	2.5	1.5	2.2	1.2
	Terminal point (GND)	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3	2.6	1.6	2.3	1.3
Status indicator   Slot		10 (16)				9 (15)				12 (I8)				11 (I7)			
	LED	4	3	2	1	4	3	2	1	4	3	2	1	4	3	2	1

## **Diagnostics**

#### **Error Table With Diagnostic Data and Status Indicators**

Error Type	Diagnostic Data	Status Indicators
Sensor voltage U <sub>S</sub> too low	I/O error message	US1 or US2 LED is off
		E (PWR) LED is red
Short circuit of a sensor supply	I/O error message	E (IN) LED of the sensor supply is red

© PHOENIX CONTACT 09/2007